

 
PARTS LIST

A



Seat Cushion x 1

B



Backrest x 1

C



Mechanism x 1

D



Armrest x 1

E



Headrest x 1

F



Headrest fixing part x 1

G



Piston x 1

H



Base x 1

I



Castor x 5

LIST OF SCREWS


Big Small
hex wrench: 1pair

Shim: 10pcs


Mechanism screws
M6*16mm x 4Armrest screws
M6*25mm x 2
M6*30mm x 4Back plate screws
M8*20mm x 3Headrest screw
M6*20mm x 1

INSTALLATION STEP


Step 1

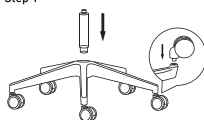Put the castor into the base by pressing.
Insert the gas lift to the base.


Step 2

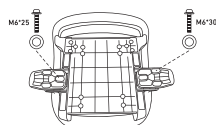Fix the armrest to the seat cushion with 2pcs
(M6*25) 4pcs (M6*30) screws and 6pcs shims.

Step 3

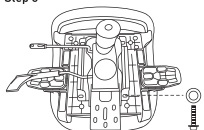Fix the mechanism to the seat cushion with
4pcs (M6*16) screws and 4pcs shims.

Step 4

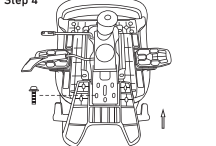Fix the back plate to the seat cushion with
3pcs (M8*20) screws.



Step 5

Fix the headrest with 1pc headrest fixing
part and 1pc (M6*20) headrest screw.

 


Step 6

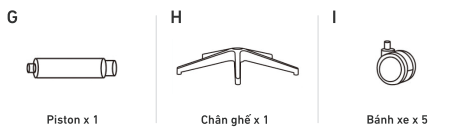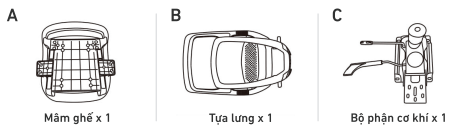


Put the mechanism in to the gas lift.
The chair is assembled.

DANH SÁCH LINH KIỆN



DANH SÁCH ỐC VÍT

	Bộ lục giác
	Ốc lắp bộ cơ khí M6*16mm x 4
	Ốc lắp lưng + mâm M8*20mm x 3

	Vòng đệm x 10
	Ốc lắp kê tay M6*25mm x 2 M6*30mm x 4
	Ốc lắp tựa đầu M6*20mm x 1

CÁC BƯỚC LẮP ĐẶT

